

Features

- Simple wiring: directly connect to AC INPUT of LED driver.
- Constant power output 30W/40W/60W.
- Universal input range, 100-347VAC, 50/60Hz.
- High output voltage DC 170V.
- Optimized design for UFO highbay fixture, private mold patent design.
- Built-in integrated junction box.
- Protection over-voltage, short-circuit, over-load, open-circuit.
- Wireless remote control or non-remote control for emergency test are optional.
- UL Listed for field or factory installation.
- Comply with UL924 standard and CSA 22.2, No. 141 for USA and Canada.
- California Energy Commission (CEC) Title 20 with BC compliant.

Model NO.

Model NO	Input Voltage	Emergency power	Emergency Time
BLD-RM30X-YY	100-347VAC	30	90minutes
BLD-RM40X-YY	100-347VAC	40	90minutes
BLD-RM60X-YY	100-347VAC	60	90minutes

Remark: "X" can be "R" or "D", "R" stands for remote control, "D" stands for non-remote control. YY Maybe any number or letter or blank for sales purpose

Specifications

Input Voltage	100-347V AC 50/60Hz	Test switch/charging indicator light	<input type="checkbox"/> Remote Control <input type="checkbox"/> Non remote Control
Output Voltage	170V DC	Battery	Li-Ion battery
Input Current	<200mA	Charging time	>24hours
Input Power	15W	Output power	<input type="checkbox"/> 30W <input type="checkbox"/> 40W <input type="checkbox"/> 60W
Emergency Time	90minutes	Weight	3.3kg
Warranty	5Years	Ambient Temp	5°C-50°C
Dimensions	273.26 x Ø142.3mm		

100-347Vac
30W/40W/60W



The BLD-RMXX-YYY series LED emergency drivers are designed for use with UFO LED high fixtures with 0/1-10V dimmable LED drivers, it allows the LED UFO high bay to be used for both normal and emergency operation.



THIS PRODUCT CONTAINS A RECHARGEABLE LITHIUM BATTERY. THE BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.

EMERGENCY LED DRIVER
30W/40W/60W



IMPORTANT SAFEGUARDS
When using electrical equipment, basic safety precautions should always be followed including the following:
PLEASE READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

CAUTION: RISK OF SHOCK: disconnect emergency and normal input power sources before servicing.
ASSEMBLY and FIELD INSTALLATION WARNING: AC power must be off before proceeding with assembly or installation of emergency driver.
IMPORTANT: An unswitched AC power source is required (100-347 VAC, 50/60 Hz). This device is designed for fixtures listed for dry, damp or wet locations.

IMPORTANT: Customers are advised to charge emergency LED driver 24 hours every 6 months during storage

IMPORTANT: For BLD-RM30X-YY's suggested to use for LED lamp less than 200W (when dimming to minimum the power needs to be less than 25W).
For BLD-RM40X-YY's suggested to use for LED lamp less than 300W (when dimming to minimum the power needs to be less than 35W)

IMPORTANT: Make sure all connections are in accordance with the National Electrical Code or Canadian Electrical Code and any local regulations.

CAUTION: To reduce the risk of electric shock disconnect both normal and emergency sources within this unit before servicing any equipment connected to this unit.

CAUTION: Do not mount near gas or electric heaters.
CAUTION: Equipment should be mounted in locations and at heights where it will not be subjected to tampering by unauthorized personnel.

CAUTION: The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
CAUTION: Do not use this equipment for other than its intended use.

CAUTION: Use with grounded, UL Listed, dry or damp location rated fixtures. Case should also be grounded.
CAUTION: This product is for use in indoor fixtures only. Do NOT use near heated air handling outlets or hazardous locations.

CAUTION: Suitable for use in 5°C-50°C ambient temperatures. Max. mounting height: 48.65ft.
CAUTION: Battery is rechargeable Li-Ion type and must be recycled or disposed of properly.

Do not use this emergency driver with accessory equipment other than recommended by the manufacturer. Failure to follow this may cause an unsafe condition and will void warranty. Servicing this equipment should be performed by qualified personnel only.

IMPORTANT: Illuminated Indicator (LED Light) means battery is in charge mode when AC power is applied. It is recommended and required by applicable code to test emergency function to ensure proper operation of the system, press the remote controller ON button every 30days to ensure the emergency driver is functioning and LED light source is illuminated. Conduct a ninety minute (90) discharge test one time (1) per year; LED light source should be illuminated for a minimum of ninety minutes (90).

TESTING SYSTEM: The emergency battery requires a minimum charge of one (1) hour before testing the circuit. A full charge requires twenty four (24) hours.

100-347Vac

EMERGENCY LED DRIVER



100-347Vac
30W/40W/60W

RUGBY
EMERGENCY LED DRIVER

EMERGENCY LED DRIVER
30W/40W/60W

100-347Vac

Wiring Diagram

1 With Dimmer

For UFO LED Highbay - 300W and have 0-10V dimming function



IMPORTANT


Emergency driver 0-10V dimming wires must be connected to UFO LED driver dimming wires for EM & function properly, will NOT operate if not connected

RECOMMENDATION:

Emergency Output Power:20% Output Power of UFO LED High Bay

2 With Wall Switch(Without Dimmer)

For UFO LED Highbay - 300W and have 0-10V dimming function



IMPORTANT

Emergency driver 0-10V dimming wires must be connected to UFO LED driver dimming wires for EM & function properly, will NOT operate if not connected

RECOMMENDATION:


Emergency Output Power:20% Output Power of UFO LED High Bay

EMERGENCY LED DRIVER
30W/40W/60W

100-347Vac

3 Without Wall Switch&Dimmer, 24hours lighting

For UFO LED Highbay - 300W and have 0-10V dimming function



IMPORTANT


Emergency driver 0-10V dimming wires must be connected to UFO LED driver dimming wires for EM & function properly, will NOT operate if not connected

RECOMMENDATION:

Emergency Output Power:20% Output Power of UFO LED High Bay

4 With Sensor(100-277/347V AC)

For UFO LED Highbay - 300W and have 0-10V dimming function



IMPORTANT

Emergency driver 0-10V dimming wires must be connected to UFO LED driver dimming wires for EM & function properly, will NOT operate if not connected

RECOMMENDATION:

Emergency Output Power:20% Output Power of UFO LED High Bay


EMERGENCY LED DRIVER
30W/40W/60W

100-347Vac

Wiring Diagram

5 With 12VDC Sensor

For UFO LED Highbay - 300W and have 0-10V dimming function



IMPORTANT:

Emergency driver 0-10V dimming wires must be connected to UFO LED driver dimming wires for EM & function properly, will NOT operate if not connected

RECOMMENDATION:

Emergency Output Power:20% Output Power of UFO LED High Bay

INSTALL STEPS

Step #1

Disconnect all power sources to the lighting fixture and ensure they are locked out during installation and maintenance.
The LED driver must be sourced from the LED emergency driver.
Select a suitable location on the ceiling with hangable device.


Step#2

(A) Install the ring bolt to the top thread hole of LED emergency driver and fix it with screw.
(B) Install the G-hook/ring bottom 10-rood/m12-rood to the Bottom thread hole of LED emergency driver and fix it with screw.
(C) Install the LED emergency driver to UFO highbay fixture with screw.
Open the LED emergency cover and remove the plastic covers and install the waterproof connectors

Step#3

Pull all wires through the waterproof connectors into the Cavity of emergency driver.
(A): Connect the AC output wires (Brown, Blue and Green) of emergency driver with AC input wires of LED lighting fixture.
(B): Connect the dimming output wires (Purple and Pink) of emergency driver with the dimming input wires of LED Driver.
(C): Connect AC input wires (Black, White and Red) of emergency driver with AC main power cord.
(D): Connect the input dimming wires (Purple, Green) of emergency driver with dimming wires from driver. Make sure all connections are with orange wiring caps in accordance with manufacturer's installation manual. Lock up the cover of junction box.

Operation Instructions

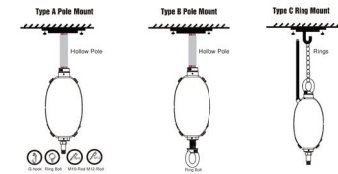

See instruction manual for typical installation and select appropriate mounting method.

Instructions For Remote Control

Press the ON button to test emergency function, this light will switch to its emergency lighting mode and the indicator light will turn off.
Press the OFF button, the light will revert to normal lighting mode.
When main power supply is off (emergency mode), press the off button to turn off emergency function.

Test switch & Indicator

RED ON: Charging mode
RED OFF: Discharging mode
Note: remote controller must be pointed at the indicator light and be within 45degree angle to receive signal.
Remote controller needs two AAA batteries to operate(not included in unit)



Size

